


# ALUMINUM MODULAR DOOR ASSEMBLY INSTRUCTIONS

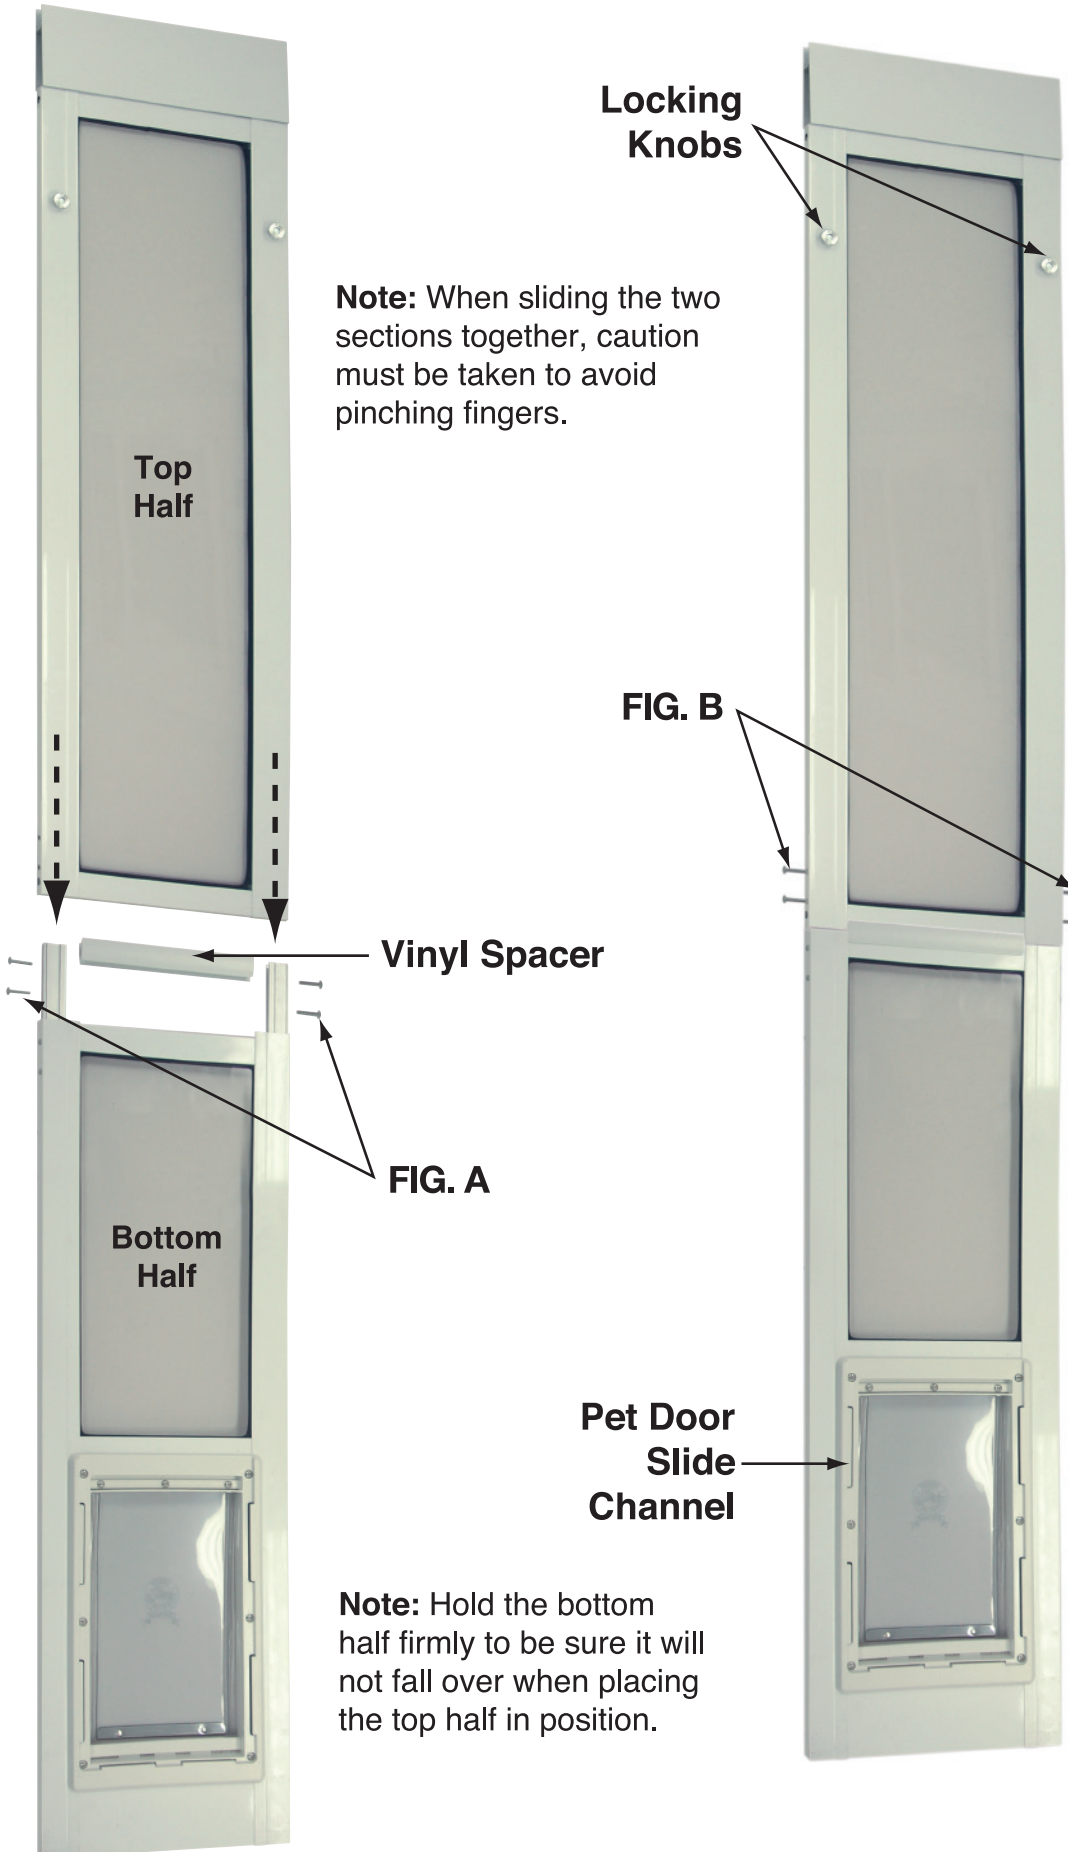

**Note:** When sliding the two sections together, caution must be taken to avoid pinching fingers.

**Note:** Hold the bottom half firmly to be sure it will not fall over when placing the top half in position.

### TOOLS REQUIRED:

- Safety goggles
- Phillips screw driver

1. Remove door top and bottom halves from box.
2. Remove 2 left and 2 right side #8 x 1" screws from inserts. **See FIG. A.**

3. Make sure **Vinyl Spacer** is placed on top of the bottom half, then carefully slide top half (without posts) onto bottom half (with posts).

4. Reinstall 2 left and 2 right side #8 x 1" screws and tightly secure with Phillips screw driver. **See FIG. B.**

**IMPORTANT:** The **Locking Knobs** at top of door, and the **Pet Door Slide Channel**, should be facing inside of house.

5. Refer to Pet Patio Door Installation Instructions (included), for installing into your Sliding Patio Door.

# Fast Fit™ Panel

## GENERAL INFORMATION & INSTALLATION INSTRUCTIONS

Fast Fit™ is designed to fit into most sliding patio doors and most sliding screen door openings, measured from inside top track to the inside bottom track. Fast Fit™ features automatic height adjustment. Panel becomes rigid when knobs located near top of Fast Fit™ are tightened.

Fast Fit™ is designed for easy installation and removal without the use of any tools besides your own two hands and a pair of scissors. For your added protection, a security lock which can be used with or without Fast Fit™ in place has been included. Installation of security lock will require a few basic tools.

### FAST FIT™ PLACEMENT

1. Release automatic height adjustment by turning knobs located near top of panel counter-clockwise. Height adjustment panel should fully extend upward (pull up on panel if necessary).
2. Open sliding glass/screen door.
3. Insert Fast Fit™ with knobs facing inside. Place top edge into top track of sliding glass/screen door. Lift up and swing lower portion of panel onto ridge in sliding glass door (or screen door.)
4. Slide Fast Fit™ against door jamb and make sure that top is fully extended, not tilted to one side, and bottom of panel is on ridge in bottom track (See Figure 1).
5. If you need to align your sliding door with your new pet patio door, please refer to the manufacturers sliding door adjustment instructions for your brand of sliding patio door.
6. Hand tighten knobs by turning clockwise to lock Fast Fit™ in place.

**Important:** Testing the fit of your Fast Fit™ is imperative. To test fit lift Fast Fit™ upward. If excessive movement is evident, loosen knobs by turning counter-clockwise and pressing in. Adjust as necessary. (See Step # 4 and repeat).

7. To permanently install the Fast Fit™ you may screw through the aluminum fins that protrude on the existing frame of your door. Drill through the fins into the Fast Fit™ (See Figure 2). Two screws in the top and two in the side, approximately 1 1/2"-2" from the bottom of door. Do not put any screws into the frame by the glass of the Fast Fit™ as breakage may occur.

8. Optional permanent placement for fixed panel sliding door. Remove screws that hold fixed glass panel in place and slide over. Insert the Fast Fit™ panel in space and re-fasten fixed glass panel.

LEARN MORE...



### FAST FIT™ PANEL REMOVAL

1. Release automatic height adjustment by turning both knobs counter-clockwise and pressing in.
2. Lifting upward, swing lower portion of panel away from lower track.

### ATTACHING FAST FIT™ BUMPER SEAL

The purpose of the Fast Fit™ Bumper Seal is to provide a weather seal and bumper between the edge of Fast Fit™ and your sliding glass door.

1. Clean all dirt and grease off edge of surface area.
2. Beginning at bottom, attach Fast Fit™ Bumper Seal on the edge of the Fast Fit™ by running Bumper Seal for its entire length and then pressing firmly into place (FIG 3). and removed excess with scissors.

### ATTACHING VINYL DRAFT SEAL

The Vinyl Draft Seal's purpose is to seal the extra air space between your sliding glass door and stationary window created when your Fast Fit™ is in place. (FIG. 4)

1. Clean all dirt and grease off edge of surface area.
2. Measure the vertical distance, or height of exposed glass, between top and bottom frames of the sliding door.
3. Cut Vinyl Draft Seal to size with scissors using measurement from above.
4. If necessary, adjust Vinyl Draft Seal width by placing on back edge of sliding glass door. Flexible vinyl on Vinyl Draft Seal should rub lightly against glass. (FIG. 4)
5. Starting at top, attach Vinyl Draft Seal by aligning edge so that it rubs lightly against glass. Pull paper off tape and gently press in place while working slowly down the Vinyl Draft Seal. Do not press firmly in the event that repositioning is necessary.
6. Press Vinyl Draft Seal firmly in place along entire length when you are satisfied it is correctly placed.

### INSTALLING SECURITY LOCK (OPTIONAL)

**Please note:** Security Lock is installed on the inside of your house.

If your sliding glass door is on the inside of your house and the stationary glass on the outside, then lock will be installed on the sliding glass. If the stationary glass is on the inside and the sliding glass door on the outside, then the security lock will be installed on the stationary part of your door.

1. With sliding door in closed position (without Fast Fit™), place lock in desired location with bolt in the retracted position, pointed toward the sliding glass door or stationary window rail, leaving approximately 1/8" clearance between bolt tip and aluminum rail (FIG. 5).
2. Holding lock firmly in place, mark screw holes and center of bolt in rail of sliding door or stationary window.
3. Drill two 1/8" holes for mounting screws and a 3/8" hole for locking bolt. **Caution: Do not drill into glass.**
4. Install Screws. **Do not overtighten.**



FIG. 1



FIG. 2


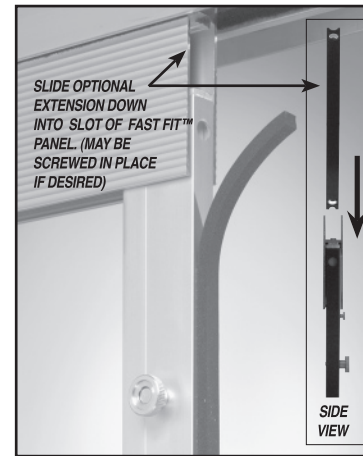


FIG. 3 - PANEL BUMPER SEAL



FIG. 4 - VINYL DRAFT SEAL


### FIG. 5 - LOCK PLACEMENT OPTIONS

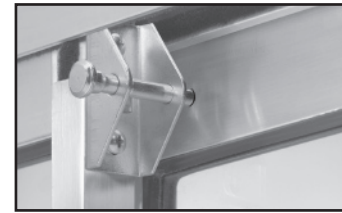

IN HEADER (OUTSIDE SLIDING DOOR)



EDGE OF MOVABLE DOOR (INSIDE SLIDING DOOR)

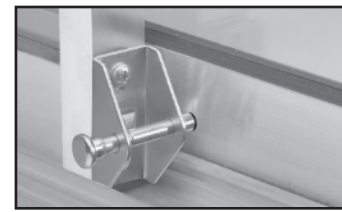

EDGE OF FIXED DOOR (OUTSIDE SLIDING DOOR)



ON SILL (OUTSIDE SLIDING DOOR)

### TRAINING YOUR PET TO USE THE FAST FIT™ PANEL

1. Close sliding glass door, with trainer on opposite side of door from pet.
2. Hold or tape flap in the open position.
3. Call or entice pet through pet entry. Do not force pet through door, training may be prolonged as a result of impatience on the part of the trainer.
4. Repeat process from the opposite side of pet door panel.
5. Call or entice pet through pet entry, but this time hold corner of flap just enough for pet to realize opening exists.
6. Repeat sequence again with flap in closed position.
7. Once pet has entered, experiencing flap contact, training has been successful. Rewarding or praising your pet after each successful attempt will reinforce use as well as accelerate training time.

### OPTIONAL CUSTOM EXTENSIONS

1. Available where your pet door was purchased. May be used to extend the height of your Fast Fit™ Panel (FIG 3). Installation of extensions is quick and easy.



Valencia, California 91355 • (661) 294-2266  
www.idealpetproducts.com

#909 1010 Rev.D-715